 


DIAGRAM

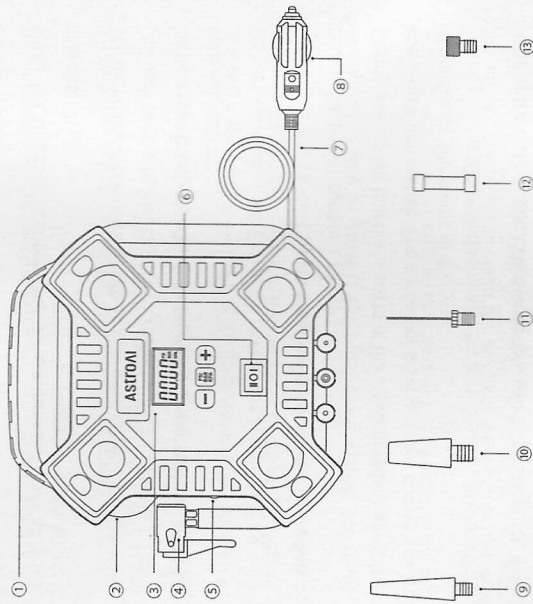


- | | |
|--------------------------|-------------------------------|
| ① Carrying Handle | ⑧ 12 V Cigarette Lighter Plug |
| ② Inflation Tube | ⑨ Air Nozzle Cone |
| ③ LCD Screen | ⑩ Air Nozzle Cone |
| ④ Quick Connector | ⑪ Needle Valve Adapter |
| ⑤ LED Light | ⑫ Replacement Fuse |
| ⑥ Multifunctional Button | ⑬ Presta to Schrader Adapter |
| ⑦ Power Cord | |


- 04 -

INSTRUCTIONS

 1. Ensure that the car's engine is running before you use it.
2. To ensure a strong connection, securely plug the air compressor into your car's 12 V outlet.
3. Press the Unit Button to switch units between PSI, Bar and kPa.

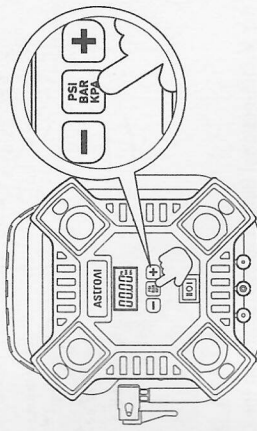


 4. Use the "+" and "-" buttons to set the desired pressure. Use the tire pressure guide on the inside of the driver's door for guidance. Make sure that the preset pressure is higher than the current pressure of your tire.

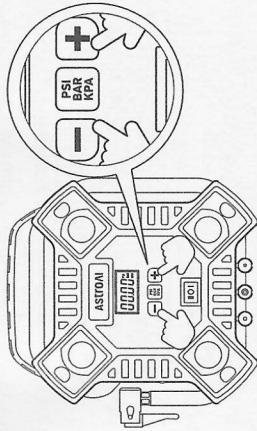

- 05 -

 DIAGRAM

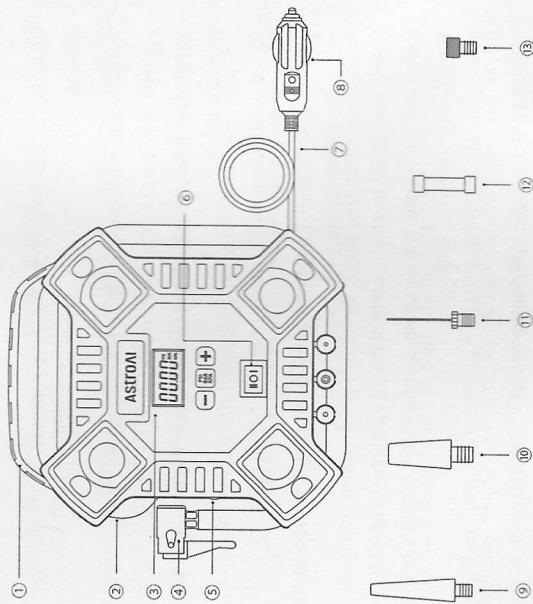


- | | |
|--------------------------|-------------------------------|
| ① Carrying Handle | ⑧ 12 V Cigarette Lighter Plug |
| ② Inflation Tube | ⑨ Air Nozzle Cone |
| ③ LCD Screen | ⑩ Air Nozzle Cone |
| ④ Quick Connector | ⑪ Needle Valve Adapter |
| ⑤ LED Light | ⑫ Replacement Fuse |
| ⑥ Multifunctional Button | ⑬ Presta to Schrader Adapter |
| ⑦ Power Cord | |


- 04 -

INSTRUCTIONS

 1. Ensure that the car's engine is running before you use it.
2. To ensure a strong connection, securely plug the air compressor into your car's 12 V outlet.
3. Press the Unit Button to switch units between PSI, Bar and kPa.

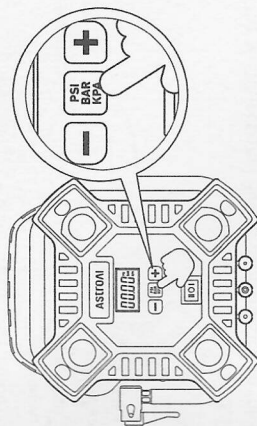


 4. Use the "+" and "-" buttons to set the desired pressure. Use the tire pressure guide on the inside of the driver's door for guidance. Make sure that the preset pressure is higher than the current pressure of your tire.

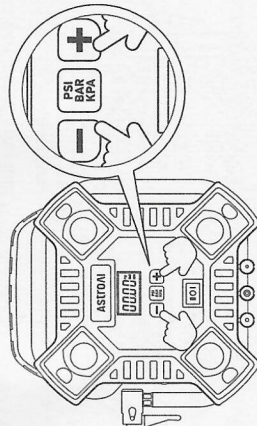


- 05 -

 5. Remove the valve cap from the valve stem of your tire, then attach the air nozzle to the valve stem. If you need to illuminate the working area, press the switch on the left side.

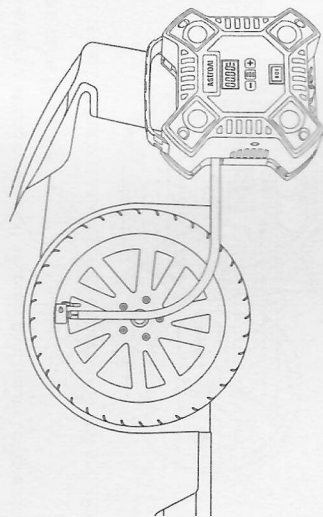

 6. Switch the Multifunctional Button to "II", to turn on the LED light.
7. Switch the Multifunctional Button to "I", to start the air compressor and turn on the light.
8. After inflation is complete, please press Multifunctional Button to "0". This will turn off the unit.

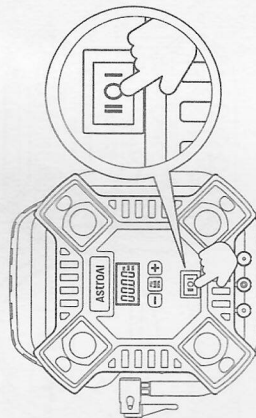

- 06 -

MAINTENANCE

Fuse removal and installation

1. Removal: Unscrew the top of the cigarette lighter cable, take the fuse and spring out.
2. Installation: Install the spring in the cigarette lighter first, then install the replacement fuse and screw the top securely.



TROUBLESHOOTING/FAQ

Air compressor will not inflate

 
- Ensure the in-line fuse is securely and correctly inserted; replace the fuse if necessary.
- Check the vehicle's cigarette lighter fuse, it should be rated at 15 A.
- Ensure there is a strong connection between the power cord and 12 V socket.
- Preset tire pressure is lower than current tire pressure, increase the preset tire pressure to the manufacturer-recommended level.

Air leaking through hose


Ensure there is a firm connection between the air nozzle and the tire valve.

- 07 -

5. Remove the valve cap from the valve stem of your tire, then attach the air nozzle to the valve stem. If you need to illuminate the working area, press the switch on the left side.

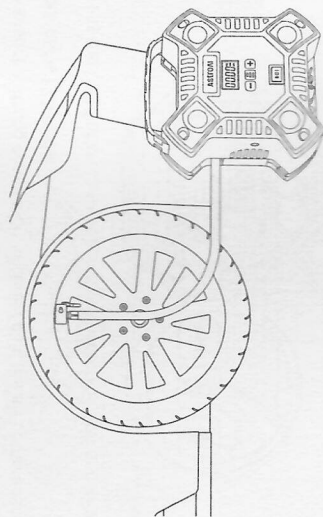

 6. Switch the Multifunctional Button to "II", to turn on the LED light.
7. Switch the Multifunctional Button to "I", to start the air compressor and turn on the light.
8. After inflation is complete, please press Multifunctional Button to "0". This will turn off the unit.

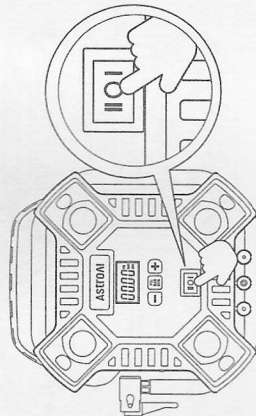

- 06 -

MAINTENANCE

Fuse removal and installation

1. Removal: Unscrew the top of the cigarette lighter cable, take the fuse and spring out.
2. Installation: Install the spring in the cigarette lighter first, then install the replacement fuse and screw the top securely.



TROUBLESHOOTING/FAQ

Air compressor will not inflate

- Ensure the in-line fuse is securely and correctly inserted; replace the fuse if necessary.
- Check the vehicle's cigarette lighter fuse, it should be rated at 15 A.
- Ensure there is a strong connection between the power cord and 12 V socket.
- Preset tire pressure is lower than current tire pressure, increase the preset tire pressure to the manufacturer-recommended level.

Air leaking through hose

- Ensure there is a firm connection between the air nozzle and the tire valve.

- 07 -

Air compressor is operating abnormally

- The inflation nozzle is not properly connected to the tire's valve stem.
- The 12 V socket is not connected securely.
- Preset tire pressure is lower than current tire pressure, increase the preset tire pressure to the manufacturer-recommended level.

Slow inflation

- The inflation nozzle is not properly connected to the tire's valve stem.
- Excessive use will slow the inflation rate of the pump. Let it cool for at least 10 minutes before resuming use.

FEATURES

- Automatic Shutoff: The air compressor automatically shuts off when the preset pressure value is reached.
- LCD Digital Display: Provides accurate measurements. It is easy to operate, read and understand.
- Longer Power Cord: The 9.84 ft (3 m) allows the inflator to easily reach any part of the car.
- Portable Design: Easy to carry and store in a car.
- Power Cut Memory Function: Automatically recalls and reapplies your last set pressure.

SPECIFICATIONS

Model	JY6P160-12
Working Voltage	DC 12 V
Power	60 W
Inflation Speed	22 Liter/Min
Maximum Working Pressure	160 PSI
Display Units	kPa, PSI, Bar
Continuous Operating Time	20 Minutes
Power Cable Length	9.84 ft (3 m)
Dimensions	7 x 7.9 x 4 in/18 x 20 x 10 cm

PACKAGE INCLUDES

AstroAI 12 Volt Air Compressor	x 1
Inflation Needle	x 1
Presta to Schrader Adapter	x 1
Replacement Fuse	x 1
Cone Inflation Adapters	x 2
User Manual	x 1